

Kit Installation Instructions

1359000B

Grinder Stand

for Ordinary and Hazardous Location Omnivore® models

(X)LSG and (X)LSGX-Series

(X)LGV02 and (X)LGH02-Series

Kit #K002012 Contents

- (4) Set Screws
- (4) Stand Base Bushings
- (2) Omnivore Wire Stands
- (4) Socket Head Cap Screws (7/8" length)
- (4) Socket Head Cap Screws (1-1/8" length)


Note: Two sets of fasteners are included in the kit, but only one set will be used.

- ▷ Shorter screws (7/8" length) are for use with single-stage pumps
- ▷ Longer screws (1-1/8" length) are for use with 2-stage pumps.

1. Remove two screws from the grinder cutter plate.

Single-stage grinders will have socket head cap screws with a 3/16" Allen wrench drive.


2-stage grinders will have hex head cap screws with an 11 mm drive head.

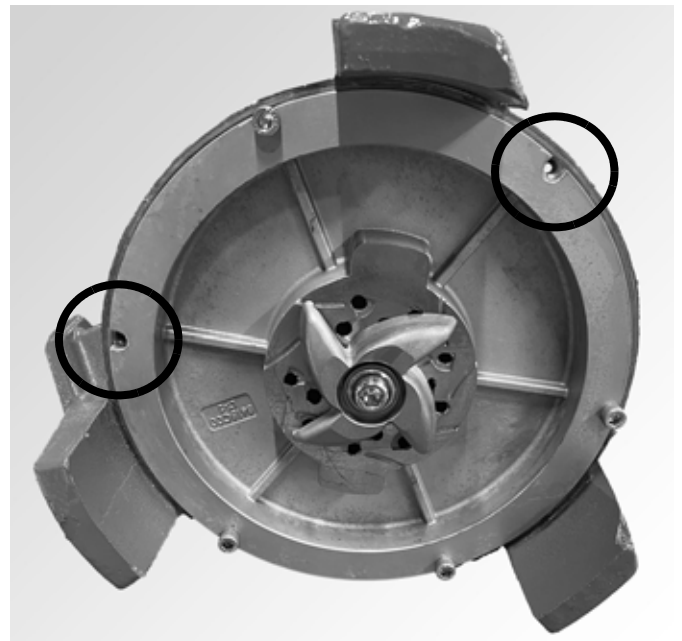

2. Install two bushings with the supplied socket head cap screws (3/16" drive).



Note: When tightening the screw, ensure that the set screw hole is facing away from the pump centerline.

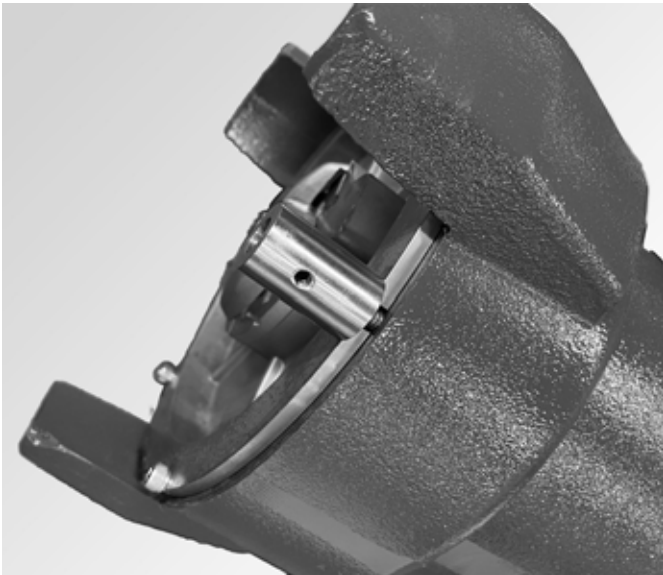

3. Slip the wire stand into both bushings, ensuring it is completely seated in the bushing.

Install the supplied set screws in the tapped holes with a 3/32" Allen wrench.



4. Repeat these steps on the opposite side of the pump.

